

1.Property

- 1.1 mode
- 1.2 printerConnected
- 1.3 sendSuccessBlock
- 1.4 sendFailureBlock
- 1.5 sendProgressBlock
- 1.6 receiveDataBlock
- 1.7 printStateBlock
- 1.8 autoStatusBlock
- 1.9 printResultBlock
- 1.10 findAllPeripheralBlock
- 1.11 connectSuccessBlock
- 1.12 connectFailBlock
- 1.13 unconnectBlock
- 1.14 readRSSIBlock
- 1.15 peripheralFilterBlock
- 1.16 upgradeFirmwareStateBlock

2.Method

- 2.1 Create a singleton object
- 2.2 Send data
- 2.3 Firmware update
- 2.4 Turn on Bluetooth scanning
- 2.5 Stop Bluetooth scanning
- 2.6 LAN scanning device
- 2.7 Send broadcast messages
- 2.8 Stop searching
- 2.9 Get all discovered printers
- 2.11 Get Bluetooth RSSI
- 2.12 Connect the printer
- 2.13 Disconnect the printer
- 2.14 Successful connection callback
- 2.15 Connection failure callback
- 2.16 Disconnect callback
- 2.17 Data sent successfully callback
- 2.18 Data sent failure callback

- 2.19 Data sending progress callback
- 2.20 The callback of the data returned by the receiving device
- 2.21 the printer print status callback
- 2.22 Peripheral filtering
- 2.23 Register with the Bluetooth center
- 2.24 Log off agent
- 2.25 Callback of firmware upgrade
- 2.26 ESC abnormal status callback
- 2.27 ESC print success callback

1.Property

1.1 mode

- Code

```
@property (assign, nonatomic) PTDispatchMode  
mode;
```

- Specification

Connection method

1.2 printerConnected

- Code

```
@property (strong, nonatomic, readonly) PTPrinter  
* _Nullable printerConnected;
```

- Specification

Printer object after connection

1.3 sendSuccessBlock

- Code

```
@property (copy, nonatomic, readwrite) PTSendSuccessParameterBlock  
_Nullable sendSuccessBlock;
```

- Specification

Send success callback property

1.4 sendFailureBlock

- Code

```
@property (copy, nonatomic, readwrite) PTEmptyParameterBlock  
_Nullable sendFailureBlock;
```

- Specification

Send fail callback property

1.5 sendProgressBlock

- Code

```
@property (copy, nonatomic, readwrite) PTNumberParameterBlock  
_Nullable sendProgressBlock;
```

- Specification

Send progress callback property

1.6 receiveDataBlock

- Code

```
@property (copy, nonatomic, readwrite) PTDataParameterBlock
_Nullable receiveDataBlock;
```

- Specification

Receiving device callback properties

1.7 printStateBlock

- Code

```
@property (copy, nonatomic, readwrite) PTPrintStateBlock
_Nullable printStateBlock;
```

- Specification

Prints the status callback property

1.8 autoStatusBlock

- Code

```
@property (copy, nonatomic, readwrite) PTESCPrinterAutoStatusBlock
_Nullable autoStatusBlock;
```

- Specification

ESC abnormal callback attribute

1.9 printResultBlock

- Code

```
@property (copy, nonatomic, readwrite) PTESCPrintResultBlock
_Nullable printResultBlock;
```

- Specification

ESC prints the complete callback property

1.10 findAllPeripheralBlock

- Code

```
@property (copy, nonatomic, readwrite) PTPrinterMutableArrayBlock  
_Nullable findAllPeripheralBlock;
```

- Specification

Found all peripheral callback properties

1.11 connectSuccessBlock

- Code

```
@property (copy, nonatomic, readwrite) PTEmptyParameterBlock  
_Nullable connectSuccessBlock;
```

- Specification

Connection success callback property

1.12 connectFailBlock

- Code

```
@property (copy, nonatomic, readwrite) PTBluetoothConnectFailBlock  
_Nullable connectFailBlock;
```

- Specification

Connection failure callback property

1.13 unconnectBlock

- Code

```
@property (copy, nonatomic, readwrite) PTUnconnectBlock  
_Nullable unconnectBlock;
```

- Specification

Disconnect callback property

1.14 readRSSIBlock

- Code

```
@property (copy, nonatomic, readwrite) PTNumberParameterBlock  
_Nullable readRSSIBlock;
```

- Specification

Read the signal strength callback property

1.15 peripheralFilterBlock

- Code

```
@property (copy, nonatomic, readwrite) PTPeripheralFilterBlock  
_Nullable peripheralFilterBlock;
```

- Specification

Peripheral filter callback property

1.16 upgradeFirmwareStateBlock

- Code

```
@property (copy, nonatomic, readonly) PTUpgradeFirmwareStateBlock
_Nullable upgradeFirmwareStateBlock;
```

- Specification

Firmware upgrade callback attribute

2.Method

2.1 Create a singleton object

- Description

Create a singleton object

- Code

```
+ (instancetype _Nullable)share;
```

2.2 Send data

- Description

send data

- Paramater

Paramater	Description
data	data

- Code

```
- (void)sendData:(NSData * _Nullable)data;
```

2.3 Firmware update

- Description

firmware update

- Paramater

Paramater	Description
data	data
block	progress block
failBlock	fail block

- Code

```
- (void)writeFirmwareData:(NSData * _Nullable)data progress:
(void(^_Nullable)(NSProgress * _Nullable))block fail:
(void(^_Nullable)(void))failBlock;
```

2.4 Turn on Bluetooth scanning

- Description

Turn on Bluetooth scanning

- Code

```
- (void)scanBluetooth;
```

2.5 Stop Bluetooth scanning

- Description

Stop Bluetooth scanning

- Code

```
- (void)stopScanBluetooth;
```

2.6 LAN scanning device

- Description

LAN scanning device

- Code

```
- (void)scanDeviceAtLAN:(NSTimeInterval)timeout;
```

2.7 Send broadcast messages

- Description

Send broadcast messages to solve the problem that the system of iOS14+ cannot receive broadcasts

- Code

```
- (void)sendBroadcastMessages;
```

2.8 Stop searching

- Description

Stop searching for devices in the local area network

- Code

```
- (void)stopScanAtLAN;
```

2.9 Get all discovered printers

- Description

Get all discovered printers

- Paramater

Paramater	Description
bluetoothBlock	callback

- Code

```
- (void)whenFindAllBluetooth:(PTPrinterMutableArrayBlock
_Nullable)bluetoothBlock;
```

2.11 Get Bluetooth RSSI

- Description

Get Bluetooth RSSI

- Paramater

Paramater	Description
readRSSIBlock	callback

- Code

```
- (void)whenReadRSSI:(PTNumberParameterBlock
_Nullable)readRSSIBlock;
```

2.12 Connect the printer

- Description

Connect the printer

- Paramater

Paramater	Description
data	Printer object

- Code

```
- (void)connectPrinter:(PTPrinter * _Nullable)printer;
```

2.13 Disconnect the printer

- Description

Disconnect the printer

- Code

```
- (void)disconnect;
```

2.14 Successful connection callback

- Description

Successful connection callback

- Paramater

Paramater	Description
connectSuccessBlock	callback

- Code

```
- (void)whenConnectSuccess:(PTEmptyParameterBlock _Nullable)connectSuccessBlock;
```

2.15 Connection failure callback

- Description

Connection failure callback

- Paramater

Paramater	Description
connectFailBlock	callback

- Code

```
- (void)whenConnectFailureWithErrorBlock:  
(PTBluetoothConnectFailBlock _Nullable)connectFailBlock;
```

2.16 Disconnect callback

- Description

Disconnect callback, after calling disconnect to disconnect the printer, this method will be called

- Paramater

Paramater	Description
unconnectBlock	callback

- Code

```
- (void)whenUnconnect:(PTUnconnectBlock _Nullable)unconnectBlock;
```

2.17 Data sent successfully callback

- Description

Data sent successfully callback

- Paramater

Paramater	Description
sendSuccessBlock	callback

- Code

```
- (void)whenSendSuccess:(PTSendSuccessParameterBlock  
_Nullable)sendSuccessBlock;
```

2.18 Data sent failure callback

- Description

Data sent failure callback

- Paramater

Paramater	Description
sendFailureBlock	callback

- Code

```
- (void)whenSendFailure:(PTEmptyParameterBlock  
_Nullable)sendFailureBlock;
```

2.19 Data sending progress callback

- Description

Data sending progress callback

- Paramater

Paramater	Description
sendProgressBlock	callback

- Code

```
- (void)whenSendProgressUpdate:(PTNumberParameterBlock  
_Nullable)sendProgressBlock;
```

2.20 The callback of the data returned by the receiving device

- Description

The callback of the data returned by the receiving device

- Paramater

Paramater	Description
receiveDataBlock	callback

- Code

```
- (void)whenReceiveData:(PTDataParameterBlock
_Nullable)receiveDataBlock;
```

2.21 the printer print status callback

- Description

Receive the printer print status callback, before using this method, you need to ensure that the printer is turned on the status callback switch, such as the `cpclTurnOnPrintStatusCallBack` method in the CPCL command set, and the `turnOnPrintStatusCallBack` method in the ESC

- Paramater

Paramater	Description
printStateBlock	callback

- Code

```
- (void)whenUpdatePrintState:(PTPrintStateBlock
_Nullable)printStateBlock;
```

2.22 Peripheral filtering

- Description

Peripheral filtering

- Paramater

Paramater	Description
block	callback

- Code

```
- (void)setupPeripheralFilter:(PTPeripheralFilterBlock  
_Nullable)block;
```

2.23 Register with the Bluetooth center

- Description

Register with the Bluetooth center, this interface is used to be compatible with the CoreBluetooth framework that you implement yourself

- Code

```
- (void)registerCentralManager:(CBCentralManager * _Nullable)manager  
delegate:(id<CBCentralManagerDelegate> _Nullable)delegate;
```

2.24 Log off agent

- Description

Log off agent

- Code

```
- (void)unregisterDelegate;
```

2.25 Callback of firmware upgrade

- Description

Callback of firmware upgrade, This callback is not required if the firmware is upgraded using the writeFirmwareData interface

- Paramater

Paramater	Description
upgradeFirmwareStateBlock	callback

- Code

```
- (void)whenUpgradeFirmwareStateBlock:(PTUpgradeFirmwareStateBlock  
_Nullable)upgradeFirmwareStateBlock;
```

2.26 ESC abnormal status callback

- Description

ESC abnormal status callback

- Paramater

Paramater	Description
autoStateBlock	callback

- Code

```
- (void)whenESCAutomaticState:(PTESCPrinterAutoStatusBlock  
_Nullable)autoStateBlock;
```

2.27 ESC print success callback

- Description

ESC print success callback

- Paramater

Paramater	Description
resultBlock	callback

- Code

```
- (void)whenESCPrintSuccess:(PTESCPrintResultBlock  
_Nullable)resultBlock;
```